



**Audiobahn®**

**QUALITY, RELIABILITY, & PURE BLISS**

**ALL-IN-ONE ROOF MOUNT 8" TFT-LCD  
WITH BUILT-IN DVD PLAYER  
AVM380DVD**

**OPERATING INSTRUCTIONS  
PLEASE RETAIN MANUAL FOR FUTURE USE AND REFERENCE**

# The Audiobahn Way

To bring the product to market that excites the consumer through sound and vision from an orientation of integrity and customer service. We make you look as good as you sound. We strive to take car audio to an extreme the world has never seen, and a world that never stops evolving.

Audiobahn was established in 1997 with one long-term goal in mind, **"Build it Bigger, Badder, & Better, and the people will take notice!"** We back this statement with an engineering team that has brought home several Innovations, Design & Engineering Showcase Awards, and a marketing team from around the world that spends countless hours developing our no compromise products to satisfy the most discriminating enthusiasts.

Our global manufacturing facilities feature ISO9002 ratings (the highest level of quality control awarded in the electronics manufacturing industry), fully robotic assembly lines and a state of the art, California based R & D laboratory.

Due to overwhelming response from our competitors, and our goal to participate in even more events this year, we created **\*\*TEAM AUDIOBAHN.**" This organization is designed to create a support network along with shirts and perks for team members. "TEAM AUDIOBAHN" is not only for the diehard competitor, but also for anyone that loves car audio as much as we do. With four levels of play, one is right for you to get started in the Audiobahn family.

Our Technical Department and entire staff look to strive above and beyond the rest of the pack by going that extra mile to help you out. Whether you happen to be a veteran competitor, or a beginner car audio enthusiast that does not know a voice coil from a spider. We are all here to help you get the best system you can with what you have.

Judge for yourself, and remember what it's all about, **"If it's not Bigger, Badder & Better, it's not Audiobahn."** If audio is your life, Audiobahn is the brand for you! We make you look as good as you sound. People never stop trying to get the best product, so we will never stop making it.

\*To learn more about "TEAM AUDIOBAHN" please give us a call, see our website at [www.audiobahninc.com](http://www.audiobahninc.com), or email us at [team@audiobahninc.com](mailto:team@audiobahninc.com) to learn about all the details.

## Table of Contents

INTRODUCTION .....	3
MONITOR INTRODUCTION.....	4
INFORMATION ABOUT DISCS.....	5
FEATURES.....	6
CONTROLS AND FUNCTIONS.....	7
REMOTE CONTROL.....	8
CHANGING THE BATTERY.....	9
OPERATION.....	10-17
WIRING.....	18
INSTALLATION.....	19
TROUBLESHOOTING.....	20
SPECIFICATIONS.....	21
HEADPHONES.....	22
WARNING / DISCLAIMER.....	23
WARRANTY.....	24-25

Dear Customer,

Congratulations on your purchase of the worlds finest brand of car audio products. Here at Audiobahn Inc. we are devoted to making our musical reproduction the very best, and we are pleased you have chosen our product. Through years of engineering expertise, hand craftsmanship, and critical testing procedures, we have created a wide range of products that reproduce music with all the clarity and richness you deserve.

For maximum performance we recommend you have your Audiobahn product installed by an Authorized Audiobahn Dealer, as we provide specialized training through our Audiobahn Installer Training Programs. Please read your warranty, keep your receipt, and original carton for possible future use.

Great products and proper installation are only a small piece of the puzzle when it comes to your system. Make sure that your installer is using only 100% authentic installation accessories from the Audiobahn Connections. The Audiobahn Connections line has everything ranging from the smallest terminal, to power wires up to 0 gauge, and 4 channel RCA cables.

To get a free brochure on Audiobahn products and Audiobahn Connections in the U.S. call (714) 988-0400 or e-mail us at [sales@audiobahninc.com](mailto:sales@audiobahninc.com).

## WARNING

Continuous exposure to sound pressure levels over 100 dB may cause permanent hearing loss. High powered autosound systems may produce sound pressure levels well over 135dB. Need we say more! Use common sense.

If after reading this manual, you still have questions regarding your product, we recommend that you see your nearest Audiobahn Dealer. A list of Authorized Audiobahn Dealers can be found on our web page. If you need further assistance, feel free to call us at (800)488-8595 and ask for the Technical Department. Be sure to have the model number, date of purchase, and invoice number available when you call.

The model number can be located on the outside of the carton. Record this in the space provided below along with the date of purchase. It is a good idea to keep your receipt with this, as you will need it in the case of a warranty repair or exchange.

Model Number: \_\_\_\_\_ Date of Purchase: \_\_\_\_\_

Read this manual carefully before operating the television and follow the cautions listed below.

1. Do not try to repair the device by yourself. Please switch off the television immediately and then inform Audiobahn or your local Authorized Dealer if there is a problem. This television is comprised of many precision electronic components. Disassembling or self renovation may damage it or cause it to malfunction.
2. Do not expose the television to moisture, dust, vapor, oils, fog, or direct sunlight.
3. Do not use diluent or other chemical detergents. Use a soft cloth to remove dust or dirt on the television.
4. Keep the television display away from extremely hot or cold conditions. The television's storage temperature range is -20 ~ 60 degrees Celsius, and its operation temperature range is 0 ~ 40 degrees Celsius.
5. Use only the AC adapter and automobile adapter (12V) that comes with the television.
6. For safety purposes, when you do not use the television, remove the AC adapter or automobile adapter.
7. Avoid dropping or impact to the television.

There may be a few bright or dark spots on the liquid crystal display. That is a very common phenomenon in active matrix display technology. It does not indicate any fault or problem has occurred.




## "NOTICE

In many states it is unlawful for a person to operate a motor vehicle which is equipped with a television receiver, screen, or other means, etc. For more information, please check with your local authorities.

Looking at a television or other video broadcast while operating a motor vehicle is an extremely

## DVD Introduce

### 1.Information about Discs

TYPE	DVD		VCD	CD
Record Format	MPEGII		MPE	CD-DA
Compatibility	One layer on one side: 4.7GB 2 hours One Layer on Both Sides: 8.5GB 4 hours	Two layer on one side: 9.4GB 4.5 hours Two layer on both sides: 17GB 9 hours	650MB 74 Minutes	650MB 74 Minutes
Size	12cm / 8cm		12cm	12cm / 8cm
Horizotal Clear	450 Lines		240 Lines	★
Caption	Max 32 Types		★	★
Language Musical Track	Max 8 Types		2	★
Icon				

### 2.Choosing guide for disc

- \* DVD discs and this player have their own world region code. Both codes must be identical in order for the unit to play the DVD.
- \* Below are the DVD world region codes.

Region code	Country or region
1	U.S.A. Canada
2	Europe, Japan, middle, East, South, Africa
3	West Asia(Includes Korea, HK and Tai Wan), Southeast Asia
4	Australia, Kinneret, Mexico, New Zealand
5	Africa, Russia, India, North, Korea, pakistan, Turkenistan
6	Chinese Main Land

#### Attention:

This machine's individual function is related to the DVD discs. The disc may not support the function or may need special settings to accomplish.

## "NOTICE

In many states it is unlawful for a person to operate a motor vehicle which is equipped with a television receiver, screen, or other means, etc. For more information, please check with your local authorities.

Looking at a television or other video broadcast while operating a motor vehicle is an extremely dangerous distraction that can lead to accidents, injury, and death."

Super slim design, perfect combination of crystal glass panel and roof mount style

8.0" TFT-LCD screen High resolution is 800X600 dots

Digital technology, clear picture with no interference

TV/DVD/CD/MP3/CD-R/JPEG format full compatibility

Auto channel search, auto store, full channel receive

Frequency range: FM88.1MHz\FM88.5MHz\FM88.9MHz

IR transmitter earphone output

2 A/V inputs

A/V output

PAL/NTSC system

Image can be reversed horizontally to 30 degrees

Image can be reversed vertically

 
Built-in stereo speaker

Dome Light

Earphone output

Full-function remote control




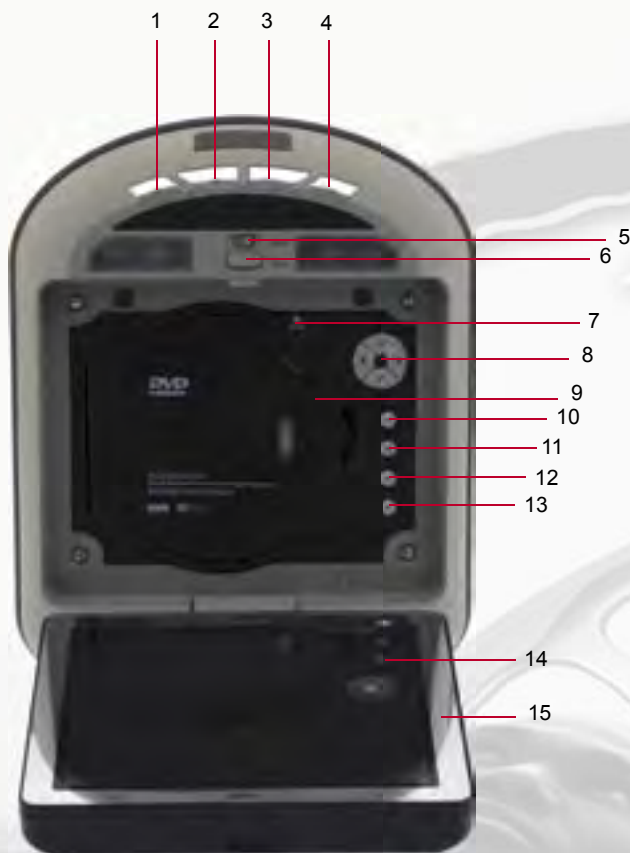


1. POWER
2. VOLUME (-)
3. VOLUME (+)
4. TV / AV SWITCH
5. DOME LIGHT (ON / OFF)
6. OPEN SCREEN LATCH
7. CD / DVD OPEN BUTTON
8. DIRECTION (▲▼◀▶)

 9. CD / DVD COVER
10. ENTER / CONFIRM
11. PLAY / PAUSE
12. STOP
13. MUTE
14. TFT-LCD PANEL
15. CRYSTAL GLASS PANEL
16. EARPHONE JACK
17. A / V IN
18. AUDIO IN



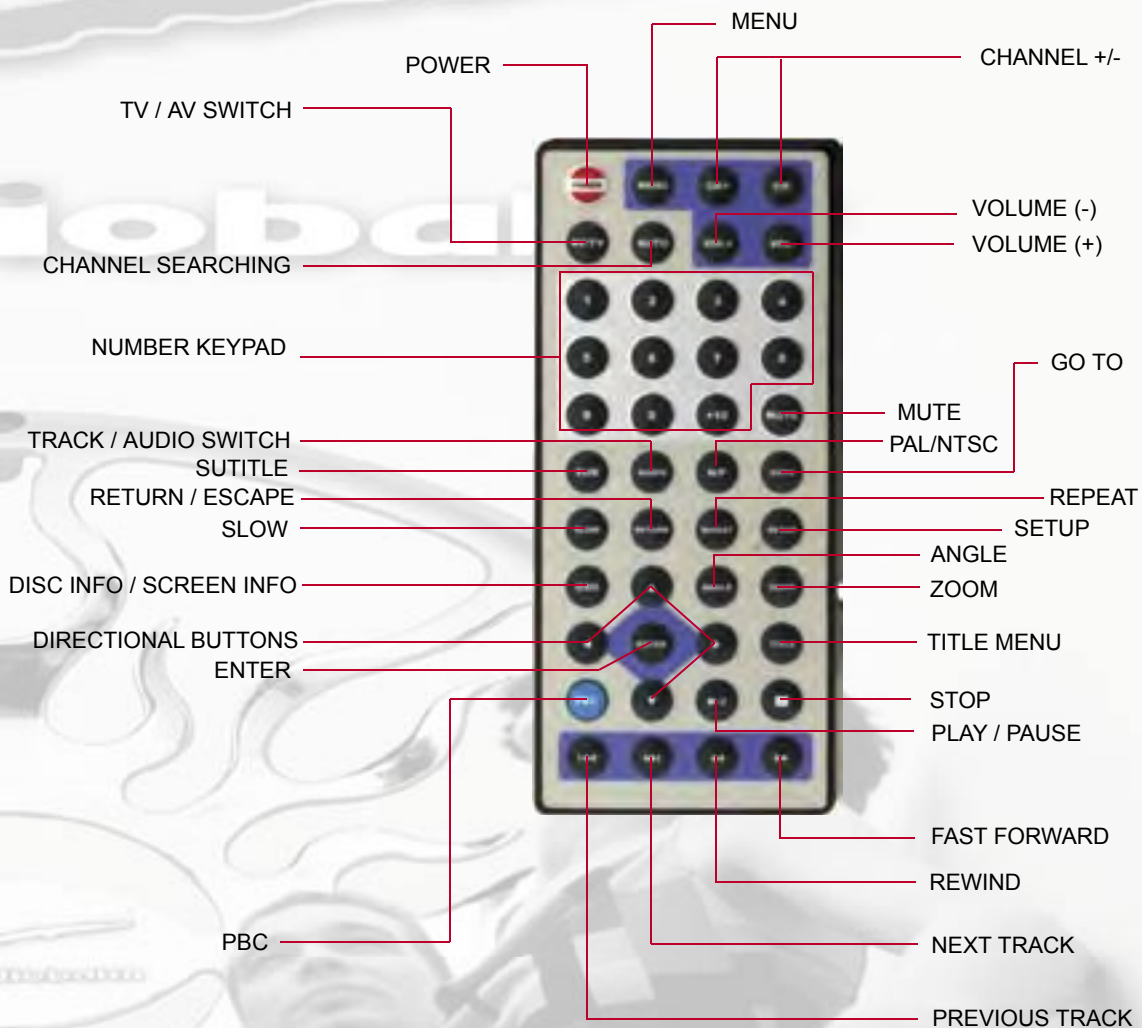

Usage button battery (Cr2025)

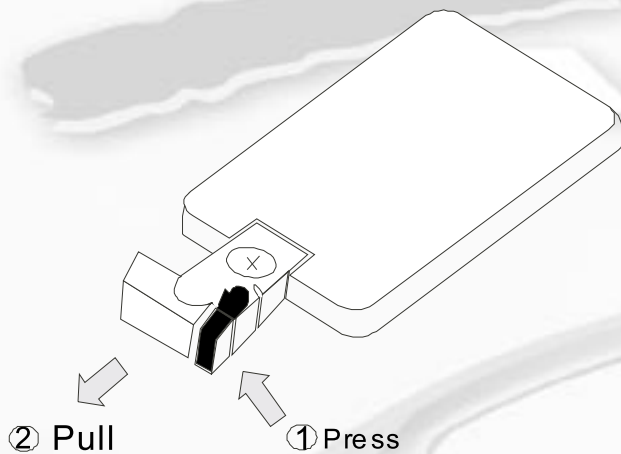 

## INSERTING DISC

1. Press the OPEN button to open the CD cover.
2. Place the disc in the unit. You should hear the CD snap into place.
3. Close the cover.

## POWERING ON / OFF

1. Press the power button to turn the unit on. Then press enter to play disc.
2. Press the STOP button once and the unit will go in standby mode. Press PLAY button to play from memory.

## PLAY / PAUSE

1. After turning the unit ON, you may press play to continue where the disc left off playing from memory.
2. If "NO DISC" is displayed, it means the disc is not properly seated in the unit, there is no disc in the unit, or the disc is damaged or unreadable.
3. When the unit is in PLAY mode, press the PLAY button to pause, press again to continue play.

## FAST FORWARD

1. Press the Fast Forward button and the unit will fast forward the disc at the following speeds (X2 / X4 / X8 / X16 / X32)
2. Press the Fast Rewind button and the unit will fast rewind the disc at the following speeds (X2 / X4 / X8 / X16 / X32)
3. When playing MP3 files, this feature is not available.

## LAST CHAPTER / PLAY NEXT

1. Press the ►| button to skip to the next chapter.
2. Press the |◄ button to go back to the last chapter.

## STOP

1. While the unit is playing, press the STOP button and the machine will go into standby mode.
2. Press the PLAY button to resume play where the disc left off at.

## MENU OPERATION

1. While the unit is playing a VCD, press the "PBC" button and the menu will change from ON to OFF.
2. When the menu operation is set to ON, selecting chapters option is not available, only menu operation is available:

A--Press RETURN to go back to the menu

B--Press 0~9 to choose

C--Press ENTER to play


When the menu operation is off, the RETURN button function is not available. The selection must be made manually.

A--Press 0~9 to choose

B--Press ENTER to play

## TITLE MENU FUNCTION

 
 
When playing a DVD, press TITLE to enter the TITLE MENU.

Press the directional  buttons to choose your selection, then press ENTR to accept.

## MAGNIFY FUNCTION

When using the ZOOM button, you can zoom the picture to double the normal size.



## ANGLE SHIFT

Some DVDs are encoded with multiple angles of the same scene. To watch available different angles press the ANGLE button and  1/2 will be displayed in the top right corner of the screen. Press ANGLE again, and  2/2 will be displayed. This function is not available with all DVDs.

## OSD (ON SCREEN DISPLAY)

  The information displayed on the screen changes depending on what mode the unit is in.

Press the OSD button and the following screen appears:

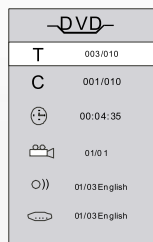

Press twice, displays: TITLE play Time

Press three times, displays: TITLE REMAIN Time

Press four times, displays: CHAPTER Play Time

Press five times, displays: CHAPTER REMAIN Time

Press six times, displays: DVD stop displaying



Play the DVD disc

Press direction key



to choose, then press "ENTER" to approve.

## DVD CONSOLE

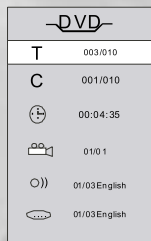  

Press twice, displays: TITLE play Time

Press three times, displays: TITLE REMAIN Time

Press four times, displays: CHAPTER Play Time

Press five times, displays: CHAPTER REMAIN Time

Press six times, displays: DVD stop displaying

Play the DVD disc

Press direction key



to choose, then press "ENTER" to approve.



## ANGLE

### Function:

To display current camera angle/change camera angle.

### Way to select:

Left/Right arrow button/Angle button



## VOICE

### Function:

To display current audio language/change audio language.

### Way to select:

Left/Right arrow button/vocal button



## SUB TITLE

### Function:

To display current subtitle/change subtitle.

### Way to select:

Left/Right arrow button/Subtitle button

## VCD CONSOLE

The information displayed on screen changes according to the state of play. Press "OSD" button, screen displays as below:

	Press twice, displays: Disc play time
	Press three times, displays: Disc REMAIN time
	Press four times, displays: TRACK play time
	Press five times, displays: TRACK REMAIN play time
	Press six times, displays: VCD stop displaying
	Press direction key  to choose, then press "ENTER" to approve.
When plays CD disc, pressing "OSD" is not functional.	



## TIME

### Function:

To display Elapsed play time/enter time menu.

### Way to select:

Number button+enter button



## PBC CONTROL

### Function:

To turn On/Off playback.

### Way to select:

Left/Right arrow button



## TRACK

### Function:

To display current track/select other track

### Way to select:

Left/Right arrow button/number button+enter button

## SLOW PLAY

Press the SLOW button while the disc is playing and the unit will play the disc in slow motion at the following speeds (1/2, 1/4, 1/8, 1/16, 1/32). Press PLAY to return to normal speed. This feature does not work when playing MP3 files.

## RETURN FUNCTION

When playing VCD 2.0, press RETURN to go back to the last menu. This function is not available with VCD 1.0 or MP3 files and CD.

## REPEAT FUNCTION

When playing a DVD, press the REPEAT button to select the following:

Chapter Repeat / Title Repeat / Play In Order

When playing a VCD or CD, in the state of PCB, press REPEAT to select the following:

Single Song Repeat / All Chapter Repeat / Play In Order

This feature is not available when playing MP3 Files.

## Captions

When playing a DVD, press the USB button and the captions displayed on the screen can be changed. Not all DVDs have this function

## Audio rails shift (AUDIO)

In the state of play, press the "AUDIO" button to shift audio rail.  
When play CD or Mp3 it is not functional.

## Systems shift (N/P)

Press the "STOP ■" key to store, then press "N/P" button, PAL, NTSC and AUTO will be exchanged.  
When play CD or MP3, it is not functional

 
## Time search (GOTO)

When machine is playing, press "GOTO" once, " ⌚ --:--:-- " will display, choose number keys to input a time, then press "ENTER", will skip to play the chapter at the time chosen.

## Setup function (SETUP)

Press "STOP ■" once in the state of play, then press the "SETUP" button;  
Press the direction key to choose operations. There are screen language, screen protection, MEMORY, TV output, video output, music rail, zoom, audio, subtitle, aspect ratio, angel mark, parental control and new password listed on screen.  
Press "ENTER" to setup.

Some operations are related to the format of discs. If discs do not support, operations are unavailable.

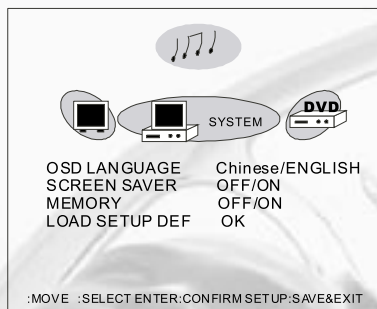


### (System Menu)

Press the "STOP ■" button, then press "SETUP", the corresponding operations will display on the screen, press direction key to choose. Move cursor up or down to choose operating item, press left or right key to change.

For example: English mode is chosen, all menu display in English.

 Choose the "MEMORY" to be on, memory function is available.

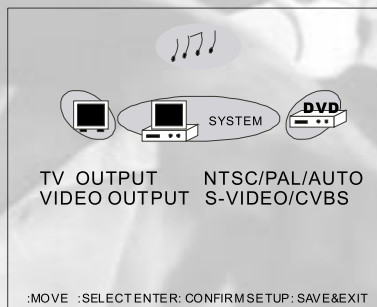


### (System Menu)


Press the "STOP ■" button, then press "SETUP", the corresponding operations display on the screen, press direction key to choose. Move cursor up or down to choose operation item, press left or right key to change.

For example: In the state of TV output, there are three systems (PAL, NTSC and AUTO) for choice.

 In the state of video output, there are two choices. (S-VIDEO, CVBS)

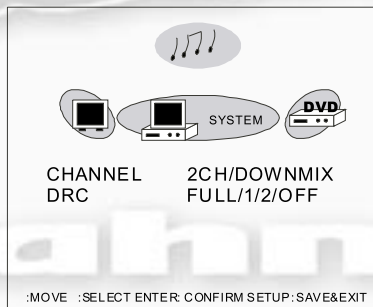


## (System Menu)


Press the "STOP" button, then press "SETUP", the corresponding operations display on the screen, press direction key  to choose. Move cursor up or down to choose operation item, press left or right key to change.

For example: Choose the "music rail", there are two choices. (2CH, DOWNMIX)

 Choose the "ZOOM" function, there are three choices. (FULL, 1/2, OFF)

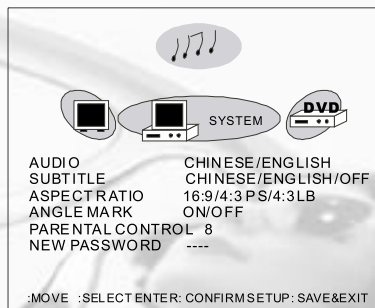

## (System Menu)

Press the "STOP" button, then press "SETUP", the corresponding operations will display on the screen, press direction key  to choose. Move cursor up or down to choose operation item, press left or right key to change.

For example: when audio is chosen, there are English /Chinese for choice.

The category of the dialogue language is recorded in the differently discs, CD, MP3 disc is invalid

The SUBTITLE operation has Chinese, English and Close three choices.

(The sub-title's category records according to the discs different and different, CD, MP3 the disc is invalid )

When choose the "ASPECT RATIO", there are 16:9, 4:3PS and 4:3 LB three choices.

Before playing disc, press "STOP" key, then "SETUP" key, enter into setting operation interface, press direction key and select "NEW PASSWORD", you could press figure keys of the remote control to enter four codes, press direction key and select "PARENTAL CONTROL" with One, Two, Three, Four, Five, Six, Seven, Eight levels and OFF selection. **(Please enter current code "8888" if forget the code)**

After finish setup, press the "ENTER" to approve and "SETUP" to quit, press "play ►" to playing storage.

Mute function (MUTE) ---corresponding the thirteenth item on the face

Press "MUTE" once, the pictures play normally without sound, press again to return.

Adjustment of volume (VOL+, VOL-) corresponding the second and third items on the face

1. Adjustment of volume;

2. Press once, the parameter changes with one step.

When the parameter reaches 100, VOL+ is unable; the parameter reaches 0, VOL- is unable.



AV/TV shift button ---corresponding to the forth item on the face

Press this key, AV/TV shift.

In the state of AV, the number key, + 10, CH+, CH-, AUTO is not functional.

“CH-” button

Press once, channel parameter decreases one step. (Or adjust the items on menu)

“CH+” button

Press once, channel parameter increases one step. (Or adjust the items on menu)

Auto search (AUTO)

The TV function can store 100 channels. (From 0 to 99)

The results will be auto stored in the process of auto search.

The machine return to channel 0 after finishes auto search, press “MENU” to stop auto searching.

Auto search starts from channel 0.

Attention: If it is hardly to perfect picture and music when the picture displays worse with noise, or the edge of picture is tingling, music is too under, it means that the signal is too weak. Outdoors antenna or cable can be applied with.

Number key (0~9, +10)

Choose channel parameter directly.

Choose the favorable song to play directly.

Press to choose program directly. Press the digital button to choose the programs of “10-100” in advance.

The TV can play 100sets of programs.

After finish the change operation, the current program and last one will change accordingly. The result will be auto stored in EEPROM.

If choose the program as same as current one, CPU will pick up the message from EEPROM again.

In the process of changing programs, choose the program directly with digital key.

(MENU)

Main menu contains PICTURE, SYSTEM, TIMER, PRESET(IN TV MODE), Press CH+, CH- to select the item, the selection turns purple. Then press VOL+, VOL- to enter the sub-menu. Press MENU button to return to MAIN MENU when in sub-menu state.

## A Main menu

MAIN	MENU
PICTURE	
SYSTEM	
TIMER	
PRESET	

(System Menu)

## B PICTURE

PICTURE	
BRIGHT	51
CONTRAST	50
COLOUR	50
TINT	100
RESET	

(System Menu)

Press CH+, CH- to select the item in the menu, Press VOL+, VOL- to adjust the item.

TINT is only functional in NTSC system. Press MENU to return to main menu.

Press to select item RESET and press VOL+/VOL- to confirm, each value will reset to 50.

## C SYSTEM

SYSTEM	
ENGLISH	
INPUT	TV
ROTATION	2
COLOR	SECAM BG

(System Menu)

Press CH+,CH- to select the menu item, VOL+/- to adjust. There are two languages to select from English to Chinese.

When select INPUT, press VOL+/- to switch between TV, Video 1 and Video 2,the device will display the corresponding signal.

Press CH+/- to select ROTATION, then press VOL+/- can change the screen image to 1,2,3,4 together 4 directions.

Press CH+/- to select COLOUR (SYSTEM COLOUR), press VOL+/- to change the TV system. In PAL there are I/DK/BK,in NTSC there are DK/BG/M,in SECAM there are BG/DK/L to select.

## D TIME

TIME	
TIME	OFF

(System Menu)

Press CH+/- to select and VOL+/- to adjust. The submenu shows TIMER OFF from 30,60,90 to 120).Select 30 the device will be off in 30 minutes.

## E PRESET

PRESET	
PROG	0
SKIP	NO
AUTO	
FINE	0
MANUAL	54MHZ

(System Menu)

Press CH+/- to select the menu item, press VOL+/- to adjust. When select PROG, press VOL+/- to increase or decrease channel value.

When select SKIP, press VOL+/- to switch ON or OFF. When select ON, the PROG you selected will be skipped when selecting the channels. If select OFF it will restore.

When select AUTO, press VOL+/- to begin auto turning. Press MENU can cancel the operation.

## SEARCH TUNER

CHO

 
44.00MHZ

When select FINE, press "VOL-" button it changes in order of (+10+9+8+7+6+5+4+3+2+1 0, -1-2-3-4-5-6-7-8-9-10),press VOL+ to change <-10-9-8-7-6-5-4-3-2-1 0,+1+2+3+4+5+6+7+8+9+10>.Adjust until the image looks best.

Press CH+/- to select MANUAL, press VOL+/- to search. It will stop when finding a channel, Press MENU to exit manual tuning and return to present channel.


Auto tuning begins from Channel 0,screen turn black and sound off.It will return to Channel 0 after finish tuning .Tuning is from 44.00-865MHz.

## CONNECTION INSTRUCTION

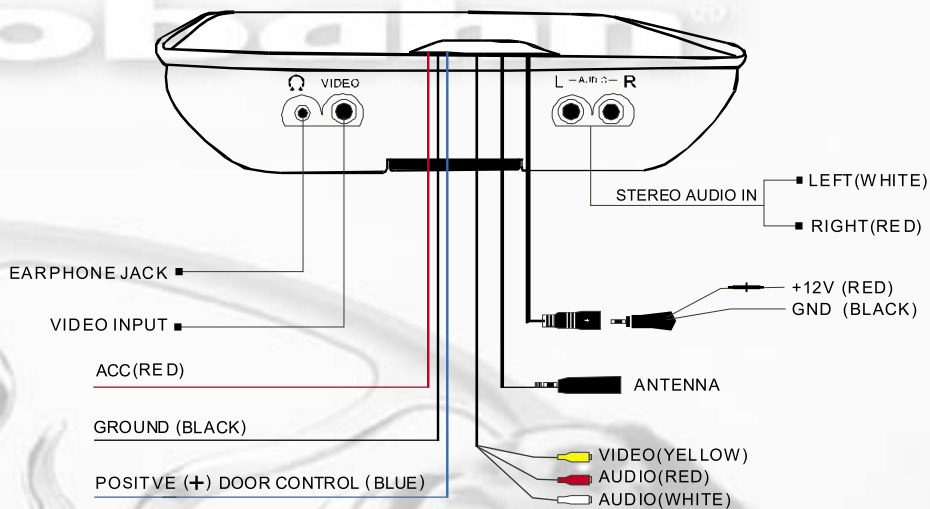


## Mounting Instructions:

 
1. Loosen the four screws in the rook of the monitor as shown in the figure #1.
2. Fasten the metal mounting plate to the roof of the vehicle with 4 of the provided PA4.0 x 16mm screws.
3. Attach the monitor to the mounting plate using 4 of the provided PM4.0 x 18mm screws.

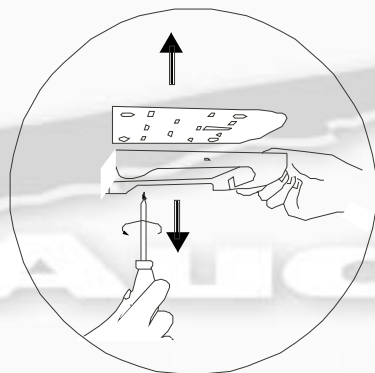

1

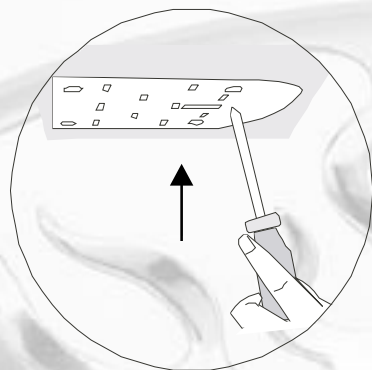 

2

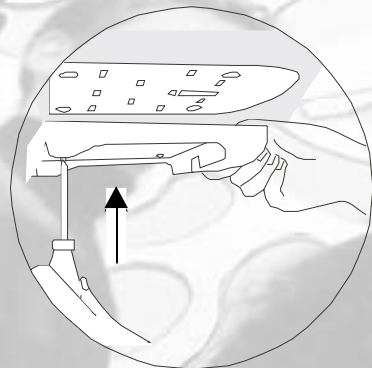 

3

Problems	Possible reasons
No sound and picture	Ac adaptor or car adaptor not is properly connected Unauthorized power supply is used. The power switch is in OFF position.
No picture	The channel selection is not done properly. Resetting the broadcast channels.
No sound	The volume is turned off. The audio sets are setup in wrong way. The broadcast signal is too weak.
Poor reception	The antenna is not adjusted properly. The channels are not tuned properly.
Dark picture	The brightness and contrast are not adjusted properly. The temperature of the using environment is too cold.

Problems	Possible reasons
Punch-drunk or unstable picture	The antenna not adjusted properly. In areas where TV signal is too weak.
Jitters	The antenna direction is in correct. The TV may be receiving reflecting signals from buildings or mountains in the area.
Snowflake	The TV may be receiving electronics or electromagnetic interference when car engineers trains high voltage wires or neon signs.
Poor color	The colour is not properly adjusted. The signal is too weak.

Problems	Possible reasons
No power supply or no voice	Electric wire conjunction inaccuracy: Check connects the lines The fuse breaks: Replace with the fuse of the specification
The CD has already pack into but no surd sound	The disc put the anti; Press the CD to put the right direction, and make its label with an upward exposure. The disc become soiled or row to harm seriously; Clean the CD or replace the new disc.
Because of the vibration but the emergence jump the sound phenomenon	Install unsteady settle:(use the gearing parts to pack this machine firm) the disc become soiled or row to harm seriously; Clean the CD or replace the new disc
Have noing vibration to also appear to jump the sound phenomenon	The CD is dirty or damage, please clean or replace the CD.

## General

Power:  
Continuously output the power:  
TV input resistance:  
Disc type:  
The exportation connects:

DC12V(11V~14V)  
2WX2  
8  
DVD/VCD/CD/MP3/JPEG  
Audio: dimensional sound output  
video: complex semaphore input

## TFT-LCD

Display: color TFT-LCD  
System: PAL DK BG I  
NTSC DK BG M  
SECAM DK BG L  
Screen size: 8 inch  
Audio output: 2000mw(max)  
Pic sensitivity: 75uv  
Color sensitivity: 100uv  
Dimension: 280X230X40mm  
Net weight: 3.5kg

## Accessories

Screw PA4.0X18mm	4
AV cable	1
Power cable	1
Outdoor antenna	1
Earphone cable	1
Remote control	1
manual	1



## AVH1 SPECIFICATIONS

FM system carrier frequency: Right channel 2.8MHz / Left channel 2.3MHz

Light weight design for comfort fit

Automatic muting design on receiving headphones

Volume control and ON / OFF power switch

Speaker size: 40mm mylar cone

Impedance: 32 Ohms 15%

Effective use range (maximum): About 10 meters

Power source: (2) AAA batteries

Battery life: About 40 hours (Depending on battery quality)

Weight: 120g (Batteries excluded)

Auto power-off (When no signal is present)

(POWER SWITCH)

Use this to turn the headphones ON / OFF.

(POWER INDICATOR LIGHT)

This light turns off if the power is not on or there is no signal being received by the headphones.

(VOLUME ADJUSTMENT)

Use this to adjust the volume up and down.

(BATTERY COMPARTMENT)

To install or replace the batteries, remove the side panel of the headphone by lifting under the lip located at the bottom of the earpiece. Use (2) AAA batteries following the placement directions located inside the compartment.

## WARNING

---

Investigate the layout of your automobile thoroughly before drilling or cutting any holes. Take care when you work near the gas tanks, gas lines, hydraulic lines, and electrical wiring. Attach the system securely to the automobile to prevent damage, particularly in the event of an accident. Do not mount the system so that the wire connections are unprotected or are subject to pinching or damage from nearby objects.

The +12V DC power wire must be fused at the battery positive terminal connection. Before making or breaking power connections at the system power terminals, disconnect the +12V wire at the battery end. Confirm your radio/head unit and/or other equipment is turned off while connecting the input jacks and speaker terminals. If you need to replace the power fuse, replace it only with a fuse identical to that supplied with the system. Using a fuse of different type or rating may result in damage to this system which is not covered by the warranty.

## Disclaimer

Specifications are subject to change without notice.  
For the most updated Specifications call Audiobahn,  
or your local Authorized Audiobahn Dealer,  
or check the Audiobahn website.  
[www.audiobahninc.com](http://www.audiobahninc.com)

## Audiobahn Consumer Product Warranty Policy

**Audiobahn** products are manufactured with the highest quality components and some of the most advanced technology available. Because of this, we recommend that you have your new products installed by an **Authorized Audiobahn Dealer**. (A list of **Authorized Audiobahn Dealers** can be found on our web page).

**Warranty Period:** One year from the original date of purchase.

**Warranty Coverage:** This warranty covers manufacturer defects only. The warranty is applicable to the original purchaser, and is non-transferable. You must have a receipt from an **Authorized Audiobahn Dealer** that shows the location of purchase, price paid, and date of purchase.

(Products purchased by consumers from an **Authorized Audiobahn Dealer** outside the United States, are covered only by that countries Distributor and not by **Audiobahn**).

**Notes:**

Complete subwoofer enclosures (**Audiobahn** will replace defective subwoofers, plexiglass, or neon only. Do not send the entire enclosure, unless the enclosure is defective itself. You must receive prior authorization and an RA# before sending in any complete enclosure).

**Audiobahn** will only replace L.E.D.(s) found to be defective at the time of purchase.

### **Audiobahn warranties do not cover the following:**

---

- Any product not purchased from an **Authorized Audiobahn Dealer** (including Internet dealers)
- Damage caused by abuse, misuse, accident, water / flood, or theft (including any cosmetic damage to the body of the product)
- Damage caused by improper installation
- Any cost or expense related to removal or reinstallation
- Any unauthorized services
- Any product that has the serial number removed, altered, or defaced
- Subsequent damage to any other components
- Pinched, cut, or stripped wires
- Any product that is new, and/or found to be in working condition
- L.E.D. indicators on electronics

How to receive warranty service: Contact your local **Authorized Audiobahn Dealer**, or call **Audiobahn at (800) 488-8595** between the hours of 9:00 AM and 5:00 PM PST.

If you are having problems with your system, we recommend you check the product carefully and thoroughly to confirm that the product truly has a manufacturer defect; as opposed to abuse, or other components in the system causing the failure. This might include having an **Authorized Audiobahn Dealer** look at the product to confirm the source of the problem. Any product found to have a manufacturer defect will be replaced with a new piece of the same or similar model, or repaired at the discretion of **Audiobahn**. Any product found to have no manufacturer defect will be returned to the sender at their cost.

**You must acquire a Return Authorization Number (RA#) prior to returning ANY product to Audiobahn.** That Return Authorization Number (RA#) must be prominently and clearly marked on the outside of the shipping carton, or product delivery will be refused (no exceptions will be made).

Please note: All shipping and handling (to and from) charges will be the sole responsibility of the consumer.

Please record and keep your Return Authorization Number (RA#) in the event that further communication is required.

Return Authorization Number (RA#): \_\_\_\_\_

Date product was sent: \_\_\_\_\_

## Contact Information

Audiobahn Headquarters

114 South Berry St.

Brea, CA 92821

Phone (800)488-8595 Fax. (714)988-0433

Pacific Coast Time : 9am-5pm Mon. - Fri.

tech@audiobahninc.com